

Bredband2

Manual

Bredband2 Växel

Brandväggsregler

The table below shows the traffic going between the customer's network.

If the traffic from the customer's network is permitted it requires in most cases no changes in the customer's firewall.

Any SIP inspection (SIP control) in the firewall must be removed for traffic to/from the service.

These destinations and protocols must be allowed for each direction, i. e. inside out and outside i as specified below.

From inside and out

To IP(s)	Dest port	Protocol	Transport	Roles	Comment
85.8.47.192/27	80	HTTP	TCP	Accept	
85.8.47.192/27	443	HTTPS	TCP	Accept	
85.8.47.192/27	5060 & 5061	SIP	TCP	Accept	SIP Inspection in the firewall must be taken away.
85.8.47.192/27	49152-65534	RTP/RTCP	UDP	Accept	Media (voice) traffic
85.8.47.192/27	123	NTP	UDP	Accept	
85.8.47.192/27	514	syslog	UDP	Accept	

From outside and in

To IP(s)	Dest port	Protocol	Transport	Roles	Comment
85.8.47.192/27	5060 & 5061	SIP	TCP	Accept	
85.8.47.192/27	49152-65534	RTP/RTCP	UDP	Accept	Media (voice) traffic

